

How to Adjust the Tension on the Remote Amperage Control

1. Remove the two (2) cover plate screws. (FIG. 1)
2. Remove the cover plate exposing the amperage control belt and tension adjustment wheel. (FIG. 2)
3. Locate notch in tension adjustment wheel. (FIG. 2)
4. Use a small flat-headed screwdriver in tension adjustment notch to rotate tension adjustment wheel clockwise from the 6:00 to the 12:00 position to tighten amperage control belt tension.

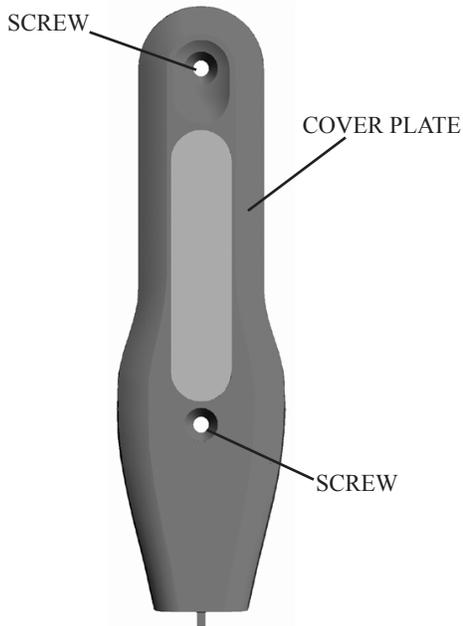


FIGURE 1

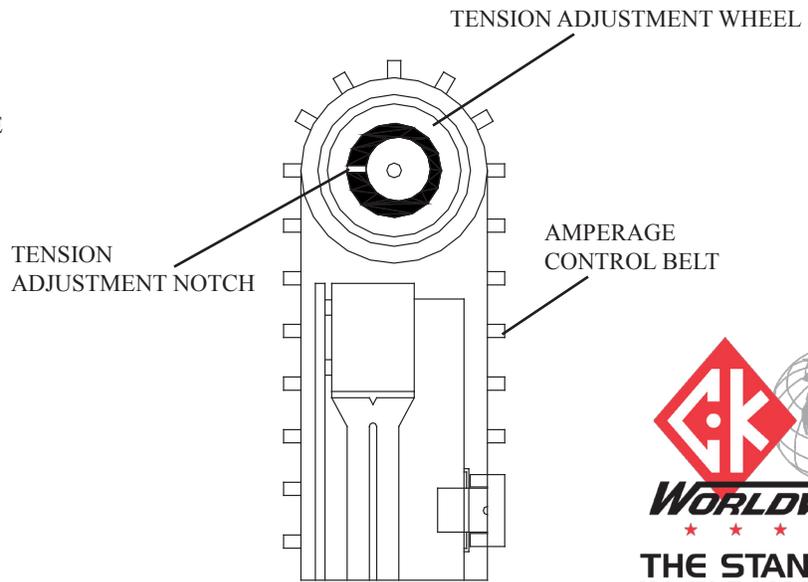


FIGURE 2



Form 9500_H
March, 2017
CK Worldwide, Inc.
P.O. Box 1636 Auburn, WA 98071
Ph: (253) 854-5820
Fax: (253) 939-1746
www.ckworldwide.com

How to Adjust the Tension on the Remote Amperage Control

1. Remove the two (2) cover plate screws. (FIG. 1)
2. Remove the cover plate exposing the amperage control belt and tension adjustment wheel. (FIG. 2)
3. Locate notch in tension adjustment wheel. (FIG. 2)
4. Use a small flat-headed screwdriver in tension adjustment notch to rotate tension adjustment wheel clockwise from the 6:00 to the 12:00 position to tighten amperage control belt tension.

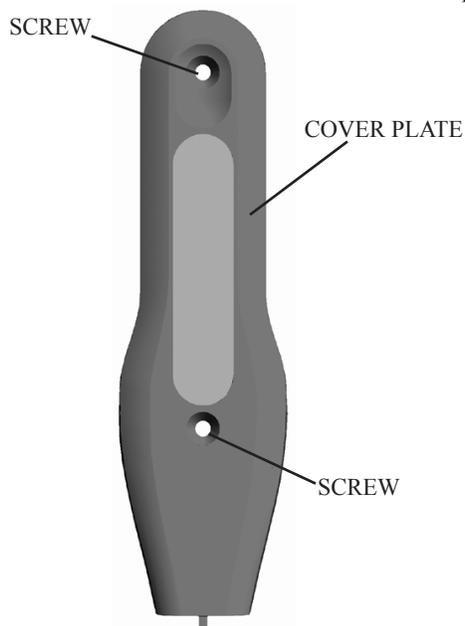


FIGURE 1

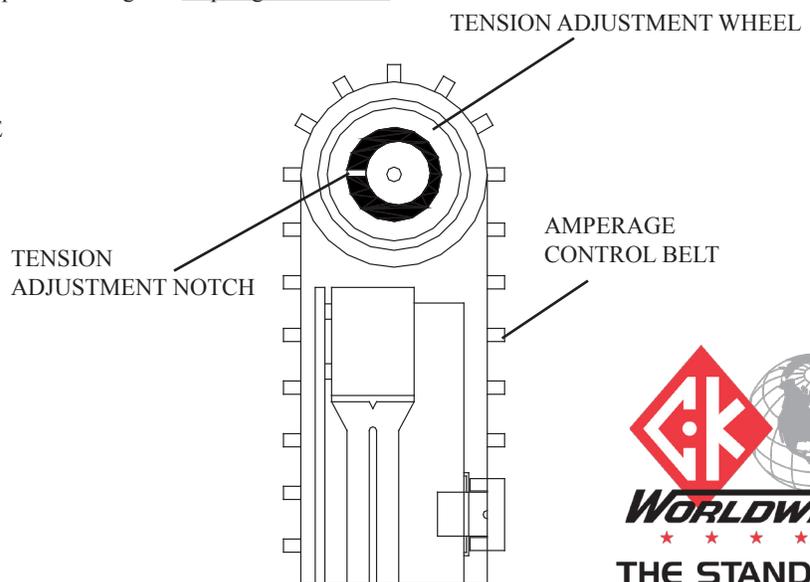


FIGURE 2



Form 9500_H
March, 2017
CK Worldwide, Inc.
P.O. Box 1636 Auburn, WA 98071
Ph: (253) 854-5820
Fax: (253) 939-1746
www.ckworldwide.com

IMPORTANT

Read Me First

**Important Belt Tension Instructions
On Reverse Side of Page**

Do Not Throw Out

IMPORTANT

Read Me First

**Important Belt Tension Instructions
On Reverse Side of Page**

Do Not Throw Out